

PEUGEOT  
MOTORCYCLES



PEUGEOT  
MOTORCYCLES

## DJANGO

Livret de bienvenue  
& d'entretien

Welcome  
& maintenance booklet





**Bienvenue**

**FR**

**Welcome**

**GB**

**Herzlich willkommen**

**DE**

**Benvenuto**

**IT**

**Bienvenidos**

**ES**

**Welkom**

**NL**

**Καλώς ήρθατε**

**GR**

**Välkommen**

**SE**

**Bem-vindo**

**PT**

**Tervetuloa**

**FI**

**Velkommen**

**DK**



### CONTENTS

Information .....	2
Your vehicle is guaranteed for 24 months .....	3
Important .....	6
- Products to use	
- Maintenance advice	
- Cleaning the vehicle	
- Environment / Recyclable	
- Extended periods of immobilisation and storage	
Starting and driving .....	8
- Starting the engine	
- Driving	
- Braking	
- Switching off the engine and parking	
Controls .....	9
Instruments .....	9
Equipments .....	10
- Storage compartment / Accessory socket	
- Utility hanger	
- Lateral stand	
Advice .....	11
- Fuel supply	
- Checking the engine oil level	
Periodic servicing .....	12

Name: - - - - -

First name: - - - - -

Address: - - - - -

Post code: - - - - -

Town: - - - - -

Telephone number: - - - - -

Model: - - - - -

Colour: - - - - -

Engine no.: - - - - -

### PRE-DELIVERY INSPECTION

VIN: VGA

The dealer must carry out the pre-delivery inspection and supply the preparation sheet for the delivered vehicle.

#### Inspection on delivery

Customer signature

I have inspected the appearance of the vehicle and signed the pre-delivery preparation sheet for my vehicle, I did not notice any anomaly. I have been informed that it is important to read the user manual and maintenance book.

Date:

Customer signature:

Dealer signature

I confirm that the vehicle identified above has undergone preparation and a pre-delivery inspection as specified by PEUGEOT MOTOCYCLES. I have supplied the customer with the user manual and maintenance book. I have explained how to operate the machine's controls and emphasised that it is important to consult the user manual and PEUGEOT MOTOCYCLES warranty conditions.

Date:

Dealer signature:

## INFORMATION

You have just bought a Peugeot vehicle.

We would like to thank you for purchasing one of our products.

Your vehicle is built to last but this does not mean that it does not require a minimum amount of maintenance.

Your authorised dealer is familiar with all the vehicle's characteristics and has genuine spare parts and specific tools. He can advise you and service your vehicle in the best conditions according to the established service schedule to ensure that you can enjoy driving it in complete safety

This manual must be considered as an integral part of the vehicle and must remain with it even if the vehicle is sold on.

It also describes a selection of your vehicle's most common functions.

However, we advise you to read the entire user manual, which is available in digital format at the following address:

<https://www.peugeot-motocycles.fr/documentation>

Scan this QR code for direct access:



In particular, you will find the safety instructions, warnings, important notes and comments in it.

In our permanent concern to make improvements PEUGEOT MOTOCYCLES reserves the right to suppress, modify, or add any reference mentioned.

The only authentic documents are those available online at the above address.

The following symbols mean:



**You are advised to read the full version of the user manual.**



**Operation that can be dangerous for people.**



**Operation that can be hazardous to the vehicle.**



**Gives key information concerning operation of the vehicle.**



**An asterisk indicates equipment depending on the version.**



**The product pollutes.**

**Do not dispose of it in the environment.**

## YOUR VEHICLE IS GUARANTEED FOR 24 MONTHS

Parts and labour, unlimited mileage

The manufacturer of your vehicle, PEUGEOT MOTOCYCLES, which has its head office at rue du 17 novembre - 25350 Mandeure (France), hereinafter PEUGEOT MOTOCYCLES, offers you a commercial warranty on your new combustion engine or electric vehicle against any material or construction defects <sup>1</sup>.

### 1. DURATION OF THE WARRANTY

PEUGEOT MOTOCYCLES guarantees your vehicle for a period of 24 months as from when it is registered for the first time with unlimited mileage unless you are informed otherwise, except for:

- The electric vehicle traction battery for which the current warranty is 24 months or 20 000 km, whichever is reached first, subject to the maintenance charges having been done regularly in accordance with the instructions in the PEUGEOT MOTOCYCLES maintenance manual;
- The electric vehicle traction battery for which the stated nominal capacity has declined by less than or equal to 25%, measured by a PEUGEOT MOTOCYCLES network technician during the warranty period. Due to the inherent chemistry of the battery, a decline in battery capacity (and therefore the vehicle's autonomy) may be observed over time, as the vehicle is used and according to the storage conditions;
- The combustion engine vehicle battery for which this warranty is six months subject to a minimum mileage of 200 km per month.

### 2. CONDITIONS OF APPLICATION OF THE COMMERCIAL WARRANTY

For optimal cover for work to be carried out on your vehicle under this commercial warranty, PEUGEOT MOTOCYCLES recommends that you exclusively entrust said work to a workshop within the authorised network.

If your vehicle is sold on, its successive owners shall benefit from the warranty until its date of expiry on condition that the application conditions of the warranty have been satisfied by each of them. For this purpose you undertake to transmit the warranty application conditions to the buyer of your vehicle.

### 3. FIELD OF APPLICATION OF THE COMMERCIAL WARRANTY

Apart from the restrictions stated below, this commercial warranty covers the repair or replacement of any elements found to be faulty by PEUGEOT MOTOCYCLES or its representative and any ensuing labour costs.

#### It should be noted that:

- The repair or replacement of parts under this commercial warranty does not extend the duration of the latter. The warranty covering replacement parts fitted to your vehicle expires on the same date as your vehicle warranty; However, if your vehicle is immobilised for a period greater than or equal to 7 consecutive days under this commercial warranty due to PEUGEOT MOTOCYCLES, said warranty will be extended by the same period;
- The faulty parts replaced under the warranty will be kept and become the property of PEUGEOT MOTOCYCLES.

#### The warranty applies on condition that:

- The first service, known as "running-in" service, has been performed in accordance with the requirements of the PEUGEOT MOTOCYCLES maintenance book, the vehicle has been regularly serviced in accordance with the requirements of the PEUGEOT MOTOCYCLES maintenance book and you can produce evidence thereof (service tracking sheet, invoices, etc.);
- The damage is not due to the replacement of original parts by parts that have not been approved by PEUGEOT MOTOCYCLES (such as, but not limited to, exhaust pipe, cylinder, piston, spark plug, inlet silencer on combustion vehicles, fuses, traction battery modules and the traction battery charger for electric vehicles, etc.), or to repairs, transformations or modifications which may have been carried out on the vehicle by companies not approved by PEUGEOT MOTOCYCLES;
- The damage is not due to additional parts or equipment that have not been approved by PEUGEOT MOTOCYCLES (such as, but not limited to, additional charger for the electric vehicle, alarms, radio, headlights, luggage carriers on the combustion or electric vehicle, etc.);
- The damage is not due to negligence, incorrect use, failure to follow the advice given in the PEUGEOT MOTOCYCLES service schedule or the user manual, overloading, even temporary, or the driver's lack of experience;

GB

1. Last service 04/2021.

## YOUR VEHICLE IS GUARANTEED FOR 24 MONTHS

Parts and labour, unlimited mileage

GB

### The warranty does not cover:

- Maintenance operations (such as, but not limited to: oil change, lubrication, adjustment, cleaning, tensioning, etc.) and servicing listed in the PEUGEOT MOTOCYCLES service schedule and required for your vehicle to operate properly;
- Repairs resulting from the use of fuels, lubricants or grease other than those recommended by PEUGEOT MOTOCYCLES;
- Repairs due to abnormal usage, an accident, theft, fire or natural causes (such as, but not limited to: hail, flooding, etc.);
- Repairs resulting from lack of vehicle cleanliness;
- Repairs resulting from long storage periods under unsuitable conditions;
- Corrosion or surface oxidation on the chassis, the screws, and, more generally, on all other metal parts, whether treated or not on combustion or electric vehicles (however, pitting corrosion is covered for a period of 24 months);
- The meter or optics for which the presence of steam does not alter information readability or lighting efficiency;
- The replacement of parts subject to normal wear linked to use of the vehicle, its mileage, its geographical and climatic environment and their non-reusable fastening parts (such as, but not limited to: self-locking nuts, etc.), if this replacement is not due to a manufacturing defect. This includes but is not limited to the following parts;

- > Drive pulley and driven pulley and belt on combustion or electric vehicles, clutch, rollers, mobile flange, guides, chain, pinion, rear cog of the combustion vehicle;
- > Bearings (wheels, rods, steering, engine, etc.);
- > Bulb, fuse, tyres, brake linings and pads, brake disks, cables and cable controls of combustion or electric vehicles, spark plug and spark suppressor on combustion vehicles;
- > Shock absorbers (hydraulic, gas pressure, single spring-loaded, elastomer) on combustion or electric vehicles, air filter, complete inlet silencer, fuel filter, oil filter, piston and piston rings on the engine of combustion vehicles ;
- > Exhaust on combustion engine (except unwelded internal elements);
- > The liquids and products (grease, hydraulic fluid, brake fluid, gearbox oil for combustion or electric vehicles, engine oil and coolant for combustion vehicles, etc.);
- Noises and vibrations which have no influence on the reliability, safety and road behaviour of the vehicle;
- Any other expenses not specifically included in this warranty or the legal compliance warranty or the legal warranty against hidden defects, such as, but not limited to: costs due to the vehicle being immobilised, loss of use or business, etc.

### 4. GEOGRAPHICAL SCOPE OF APPLICATION

The warranty is applicable in the countries or territories where the vehicle is marketed by the approved PEUGEOT MOTOCYCLES network (in particular, France, Germany, Italy, Spain) a list of which can be consulted on the manufacturer's website:

<http://www.peugeot-motocycles.com>

The vehicle is intended exclusively for sale and use in the above-mentioned countries and territories excluding all other countries or territories, where the applicable standards may be different to those in the above-mentioned countries and territories, such as, but not limited to, the United States of America, etc.

Use of the vehicle in these excluded countries or territories is under the user's entire responsibility and excludes the application of this warranty as well as the vehicle manufacturer's responsibility for any reason whatsoever.

In some countries, especially in European Union Member States, the consumer has rights under the applicable national legislation. These rights are not affected by the warranty as defined above.

 




## IMPORTANT

### PRODUCTS TO USE

#### Fuel

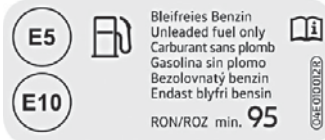


#### Engine oil

50 cc

SAE 5W40 100% Synthetic  
Minimum grade API SL

125 cc

 SAE 10W40 / SAE 10W50 100% Synthetic  
Minimum grade API SL

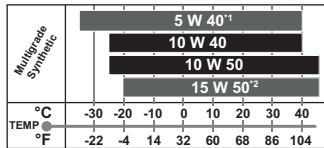

\*Recommended if:

<sup>1</sup> Minimum annual temperature < -20°C

<sup>2</sup> Minimum annual temperature > 0°C

#### Relay box oil

SAE 80W90 API GL4

#### Brake fluid

DOT 4

#### Grease

High-temperature grease  
Multi-use grease

#### Fork oil

Hydraulic oil. SAE10

### MAINTENANCE ADVICE

Ensure that the servicing schedule for your vehicle is strictly followed to maintain your contractual warranty rights.

A table of inspections for the maintenance schedule is inserted into the maintenance booklet. The registered dealer must add his stamp, the date of servicing and the number of kilometres the vehicle has covered.

In order to maintain maximum safety and reliability of your vehicle, you are advised to have maintenance and repairs carried out by a registered dealer who has the necessary technical training, specific tools and spare parts.

After an accident, it is recommended to have the vehicle inspected and repaired by a registered dealer.



### CLEANING THE VEHICLE



The bodywork is made of plastic parts that can be painted or are shiny. Do not use solvents or cleaning products that are too corrosive.



Do not use high pressure cleaners which may cause water to infiltrate the following parts: seals, bearings and hinges, electrical components such as connectors, contactors and lighting.

Wash the bodywork with soapy water and rinse with generous amounts of clear water.

The vehicle can be dried with a chamois leather.

After washing the vehicle, brake several times at low speed to dry out the brakes.



The vehicle should be washed in a place equipped for wastewater collection.

Certain silicon-based products can alter the quality of the paintwork.

In case of need or doubt, a registered dealer can advise you on using cleaning products or restoring scratched bodywork.

## ENVIRONMENT / RECYCLABLE

Worn parts replaced during routine maintenance (mechanical parts, battery, etc.) must be disposed of with specialised bodies.

At the end of its life, the vehicle must be taken to an authorised centre for recycling.

In all cases, comply with the local laws.



**Batteries contain harmful substances. They must be disposed of according to the legal requirements and must under no circumstances be thrown away in the household waste.**

## EXTENDED PERIODS OF IMMOBILISATION AND STORAGE

If the vehicle has to be immobilised for more than 1 months, you are advised to carry out the following operations:

### Battery



**If the vehicle is not used for an extended period, the battery will slowly discharge naturally or due to its electronics or certain accessories and must thus be regularly charged.**

- Charge the battery to 100% beforehand (The battery's maximum charging current is equal to 1 tenth of its capacity).
- Use a maintenance charger or charge monthly.
- Before restarting, the battery must be charged to 100%.



**If these recommendations are not followed, the battery may go into deep discharge. In this case the manufacturer's warranty will be void.**

### Machine

- Empty the fuel tank to avoid fuel build-ups.
- Spray a lubricant onto the metal parts of the vehicle to avoid oxidation.
- Store the vehicle in a dry place.

### Re-starting your vehicle

 
You are advised to have the vehicle checked over by a registered dealer if it has been immobilized for an extended period.

## QUICK-START GUIDE

### STARTING AND DRIVING

#### Key-operated ignition switch functions

2 keys are delivered with the vehicle.

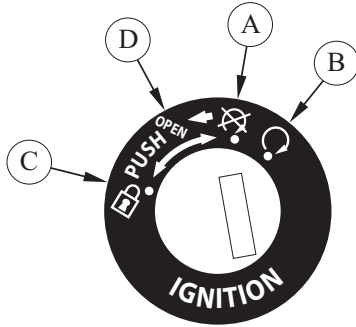

- A. Engine off position
- B. On position
- C. Steering unlocked
- D. Opening the saddle

#### Starting the engine

For greater safety, place the vehicle on its central stand before starting the engine.

- Turn the ignition key to "ON".
- Ensure that the throttle is in the OFF position.
- Press one of the brake levers while pressing the starter button. Do not press the starter for more than 10 seconds.
- Release the starter button as soon as the engine starts.

 


If the engine does not start, release the starter button and the brake lever, wait a few seconds and try again.

#### Driving

The vehicle is on its stand with the engine running.

- Squeeze the brake lever with your left hand, grip the grab handle with your right hand and push the vehicle forwards to fold up the central stand.
- Sit on the vehicle.
- Release the left brake and turn the throttle slowly with your right hand to start moving.

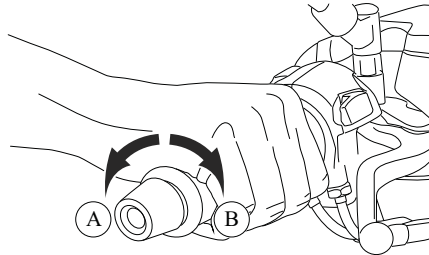

To accelerate, turn the throttle towards (A). To slow down, turn the throttle towards (B).

#### Braking

DJANGO 50 cc

##### Conventional braking

The right lever controls the front brake and the left lever controls the rear brake.

#### Use of the brakes

For good braking, it is very important to coordinate the following actions:

- Close the throttle.
- Operate the left and right brake levers simultaneously and slowly increase the pressure.

DJANGO 125 cc

##### Braking system ABS

This is a wheel anti-lock system.

- Controlled by the right lever, it acts on the front wheel.
- The ABS system enables the rider to retain control of the vehicle when braking in slippery conditions.
- The left brake lever operates like a standard braking system by acting on the rear wheel.

#### Use of the brakes

- Close the throttle.
- Activate the brake system by gradually increasing the pressure.

#### Switching off the engine and parking

The engine is switched off when at idling speed by turning the ignition key to "OFF".

The vehicle should be parked on flat ground.

- Either on the middle stand.
- Or on the lateral stand.

 
Each time the vehicle is parked, the steering should be locked and the ignition key removed.



The steering must be locked every time you park.

## CONTROLS

### Left controls

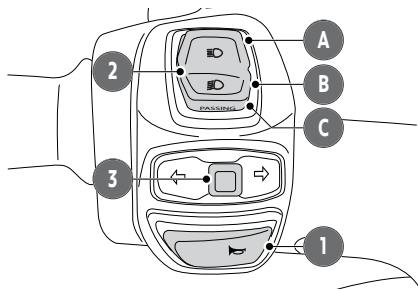


1. Horn switch.
2. Dipped lights/Headlights switch.

The dipped lights/headlights switch has 3 functions:

- A. High beam.
- B. Dip beam.
- C. Flashing the lights (Passing).

3. Indicators switch.

### Right controls

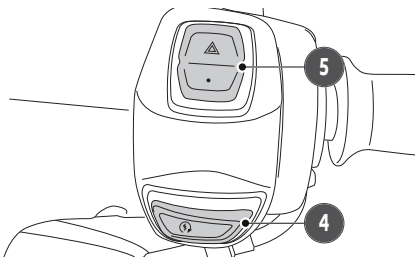 

4. Starter switch.
5. Hazard warning light switch.




Refer to the online user manual for further information.


## INSTRUMENTS

 The instrument panel initializes itself every time the ignition is switched on.

**DJANGO 50 cc**

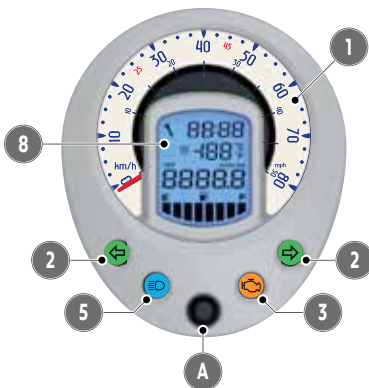

**DGJANGO 125 cc ABS**

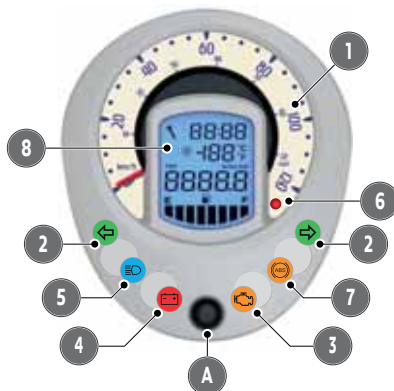 

1. Speedometer.

- Double-scale speedometer showing kilometers and miles.

2. Right-Left indicator warning light/Hazard warning light indicator.

3. Emissions control system failure warning light / Engine self-diagnostic.



fixed / Flashing.

The anti-pollution system is faulty.



You are advised to have the vehicle checked by an authorised dealer.

4. Battery charge indicator.
5. Main beam control.
6. Deterrence light.
7. Brake system management indicator light ABS.



At very slow speeds and during shut-down, the lamp ABS blinks slowly, indicating that the system is deactivated.

 
8. Multi-function display.

A. Display control knob.



Refer to the online user manual for further information.

GB

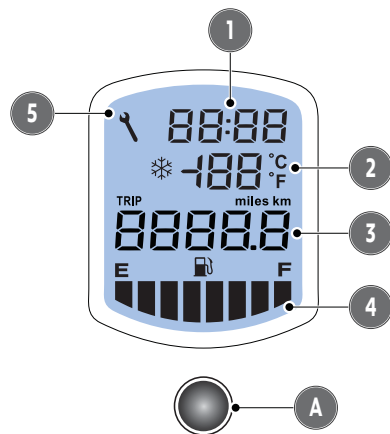

1. Clock.
2. Outside temperature gauge (C° or F°).
3. Milometer / Tripmeter.

#### Changing from the total distance display to the daily distance display.

- With the ignition on, switching from the total distance display to the daily tripmeter and vice-versa is done by briefly pressing the control button (A).

#### Resetting the tripmeter

- With the ignition on, resetting the daily tripmeter is done by pressing the control button for more than 3 seconds (A).

#### **4. Fuel gauge. Fuel reserve gauge.**

The fuel reserve gauge is shown by the last 2 segments flashing.

#### **5. Maintenance indicator.**

**A. Display control knob.**

## EQUIPMENTS



The user manual describes other equipment.

### Storage compartment / Accessory socket

 
To open the flap of the glove compartment, insert the key into the lock and turn it to the right.

1 - Storage compartment.


2 - 12 V accessory socket / USB socket \*.

The accessory socket is powered when the ignition is switched on.

It can be used to connect low-voltage devices (mobile phone, GPS, etc.).

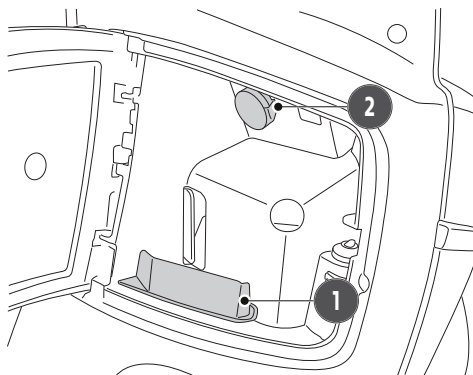

### Utility hanger

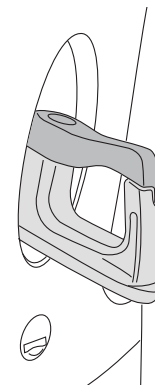 

The utility hanger is located on the rear shield panel. It can be used to attach a maximum load of 2.5 kg.

### Lateral stand DJANGO 50 cc

The lateral kickstand is fitted with an ignition cut-out which prevents the engine from being started while the stand is down.

This system reminds the driver to lift the stand before starting the engine.

If the engine starts with the kickstand down, it is essential to have the circuit checked by an approved dealer.

### DJANGO 125 cc

 
The stand is fitted with a contactor which will allow the engine to be started up if the stand is down but only with limited engine speed.



Refer to the online user manual for further information.

## ADVICE

### Fuel supply

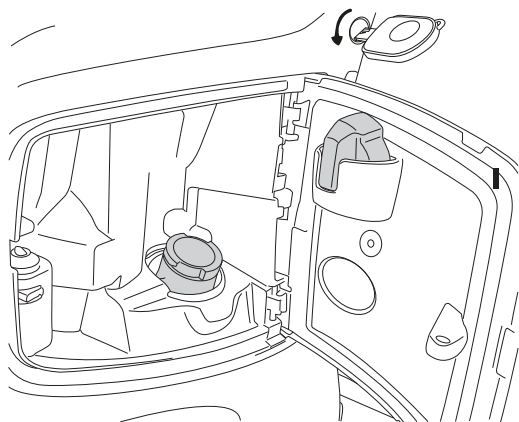

- Place the vehicle on the central stand.
- To open the fuel hatch, insert the key into the lock and turn to the left.
- When filling up with fuel, ensure the end of the nozzle is correctly inserted into the filling orifice on the fuel tank.

While filling, place the cap in the holder provided for this purpose on the inside of the flap.




**Do not fill the fuel tank to excess: The fuel may expand due to the engine heat or heat from the sun and overflow.**
 
### Checking the engine oil level




**Check the oil level every 1000km / 600Mi or before a long journey.**

- To correctly measure the oil level, place the vehicle on the centre stand on flat ground.
- Start the engine, let it run for a few minutes and then stop it.
- After switching off the engine, wait for 5 minutes to allow the engine oil time to return to the oil sump.
- Remove the oil filler cap/gauge (1).

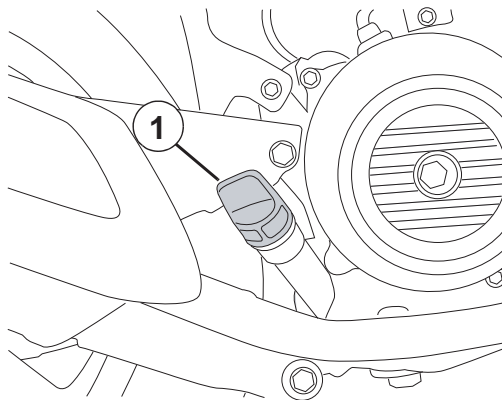

- Wipe the filler cap/gauge using a clean cloth and reinsert it into the filler hole **without screwing it up**.

 - Remove the filler cap/gauge and check the oil level.
- The oil level shall be between the minimum (A) and maximum (B) level marks without exceeding the latter.

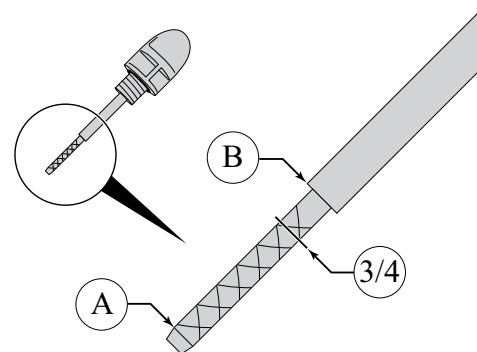

- If the oil level is close to the minimum mark or lower, you are advised to immediately top up the level to 3/4 in small amounts using the oil recommended by the manufacturer.



**Too much oil will noticeably restrict the vehicle's performance.**

GB

## PERIODIC SERVICING

GB

### Special important points:

Compliance with the servicing schedule in light of the conditions of use will help keep your vehicle running smoothly over time and preserve its qualities, while being covered by the warranty. We recommend that you entrust these operations to an authorised Peugeot Motorcycles dealer who has been trained by the manufacturer and has suitable tools.

There is no need for an annual test if a periodic test has been conducted during the year.

From 25000 km (15600 mi), servicing must be performed by repeating operations from 5000 km (3100 mi).

Clean or replace the air filter (engine/transmission) more often if the vehicle is used in particularly dusty or humid areas.

### Heavy duty servicing / Harsh conditions of use (\*):

Components marked with an asterisk must be maintained more regularly if the vehicle is used in either of the following conditions:

Humid, dusty, high heat area, predominantly urban use, at temperatures frequently dropping below -5°C, Repeated short or door-to-door trips with a cold engine at a low temperature, etc.

For vehicles used for commercial purposes (home deliveries, couriers, etc.), mileage must be divided by 2.

### Care / Cleanliness:

In light of the design and aesthetic appeal of a two-wheeled vehicle, numerous components are exposed to the elements. This vulnerability may result in functional or cosmetic damage (corrosion, etc.), even on high-quality parts. This is why proper regular servicing helps not only preserve its appearance, smooth running and your enjoyment; it is also essential to maintain your Warranty rights.



## SERVICE SCHEDULE DJANGO 50 CC

Servicing must be performed by a PEUGEOT MOTOCYCLES registered representative.

	Operations to be carried out	500km 300mi or 1 months	5000km 3100mi	10000km 6200mi	15000km 9300mi	20000km 12400mi	ANNUAL MAINTENANCE
	<b>Engine</b>						
*	Engine oil	R	R Every 5000 km (2500 km if harsh use servicing)				R
*	Oil filter (Screen)	C	C	C	C	C	C
	Valve clearances	I		I		I	
	Spark plug			R		R	
*	Intake air filter		R Every 10000 km (5000 km if harsh use servicing)				
	Intake silencer drain		C	C	C	C	C
	Drive pulley / Flange wear			I		R	
	Drive pulley rollers and guides			I		R	
	Transmission belt			R		R	
	Driven pulley caged needle bearing			L			
	Clutch lining wear			I		R	
	Driven pulley			I		R	
	Transmission fluid	R		R		R	
*	Kick starter mechanism		L	L	L	L	
*	Petrol pipe: No leaks or cracks	I	I	I	I	I	I
	Canister unit, canister valves and hoses		I	I	I	I	
	Inlet canister valve		I	R	I	R	

\*: Heavy duty servicing

I: Inspect, clean, adjust, replace if necessary.  
R: Change.

C: Clean, replace if necessary.  
L: Lubricate, oil

GB

## SERVICE SCHEDULE DJANGO 50 CC

GB

	Operations to be carried out	500km 300mi or 1 months	5000km 3100mi	10000km 6200mi	15000km 9300mi	20000km 12400mi	ANNUAL MAINTENANCE
	<b>Cycle part</b>						
*	Steering: No sticking point / No play	I	I	I	I	I	
*	Wheels: Condition and runout / No play	I	I	I	I	I	
*	Tyres: No cracks, wear and pressure	I	I	I	I	I	I
*	Fork / Front suspension: Condition, operation and no leakage	I	I	I	I	I	
	Fork oil					R	
*	Rear suspension: Condition, operation and no leakage	I	I	I	I	R	
*	Throttle control: Operation, play and lubrication	I	I + L	I + L	I + L	I + L	
	Moving parts and cables		L	L	L	L	
*	Kickstands: Operation and lubrication		I + L	I + L	I + L	I + L	
*	Tightness of nuts and bolts	I	I	I	I	I	
	<b>Braking system</b>						
*	Brake fluid level / No leakage	I	I	I	I	I	I
	Brake fluid		R Once every 2 years				
*	Brake calipers: cleanliness, guide pins, functioning			I + L		I + L	
*	Brake pad wear		I	I	I	I	
*	Brake disk wear		I	I	I	I	
*	Brake hoses: No leaks or cracks		I	I	I	I	
*	Cable-operated brake control: Condition and lubrication		I + L	I + L	I + L	I + L	
*	Brake lining wear		I	I	I	I	
	Brake levers		L	L	L	L	

\*: Heavy duty servicing

I: Inspect, clean, adjust, replace if necessary.  
R: Change.

C: Clean, replace if necessary.  
L: Lubricate, oil

## SERVICE SCHEDULE DJANGO 50 CC

	Operations to be carried out	500km 300mi or 1 months	5000km 3100mi	10000km 6200mi	15000km 9300mi	20000km 12400mi	ANNUAL MAINTENANCE
	<b>Electrical equipment</b>						
*	Lighting and signalling	I	I	I	I	I	I
	Headlight height adjustment	I	I	I	I	I	
*	Brake light switches	I	I	I	I	I	I
*	Battery: Charge level and no leakage	I	I	I	I	I	I
	<b>Miscellaneous</b>						
*	Processors: Reading of fault codes and update	I	I	I	I	I	
*	Overall operation: Road test	I	I	I	I	I	

\*: Heavy duty servicing

I: Inspect, clean, adjust, replace if necessary.  
R: Change.

C: Clean, replace if necessary.  
L: Lubricate, oil

	<b>Servicing time in tenths of an hour 0.5 h = 30 mn)</b>						
	Reception and Treatment	0.1	0.1	0.1	0.1	0.1	0.1
	Django 50 cc	1.7	0.8	2.8	0.8	3.6	0.8

Maintenance times are indicative. They do not take into account the replacement of wear parts.

GB

## SERVICE SCHEDULE DJANGO 125 CC

Servicing must be performed by a PEUGEOT MOTOCYCLES registered representative.

**GB**

	Operations to be carried out	500km 300mi or 1 months	5000km 3100mi	10000km 6200mi	15000km 9300mi	20000km 12400mi	ANNUAL MAINTENANCE
	<b>Engine</b>						
	Engine oil	R	R Every 5000 km (Asia: R Every 2500 km)				R
	Oil filter (Screen)	C	C	C	C	C	C
	Valve clearances		I	I	I	I	
	Spark plug			R		R	
*	Intake air filter	R Every 10000 km (5000 km if harsh use servicing)					
	Intake silencer drain		C	C	C	C	C
	Drive pulley / Flange wear			I		R	
	Drive pulley rollers and guides			I		R	
	Transmission belt			R		R	
	Driven pulley caged needle bearing			L			
	Clutch lining wear			I		R	
	Driven pulley			I		R	
	Transmission fluid	R	R	R	R	R	
	Petrol pipe: No leaks or cracks	I	I	I	I	I	I
	Canister unit, canister valves and hoses		I	I	I	I	

\*:Heavy duty servicing

I: Inspect, clean, adjust, replace if necessary.  
R: Change.

C: Clean, replace if necessary.  
L: Lubricate, oil

## SERVICE SCHEDULE DJANGO 125 CC

	Operations to be carried out	500km 300mi or 1 months	5000km 3100mi	10000km 6200mi	15000km 9300mi	20000km 12400mi	ANNUAL MAINTENANCE
	<b>Cycle part</b>						
*	Steering: No sticking point / No play	I	I	I	I	I	
*	Wheels: Condition and runout / No play	I	I	I	I	I	
*	Tyres: No cracks, wear and pressure	I	I	I	I	I	I
*	Fork / Front suspension: Condition, operation and no leakage	I	I	I	I	I	
	Fork oil					R	
*	Rear suspension: Condition, operation and no leakage	I	I	I	I	R	
*	Throttle control: Operation, play and lubrication	I	I + L	I + L	I + L	I + L	
	Moving parts and cables		L	L	L	L	
*	Kickstands: Operation and lubrication		I + L	I + L	I + L	I + L	
*	Tightness of nuts and bolts	I	I	I	I	I	
	<b>Braking system</b>						
*	Brake fluid level / No leakage	I	I	I	I	I	I
	Brake fluid						R Once every 2 years
*	Brake calipers: cleanliness, guide pins, functioning			I + L		I + L	
*	Brake pad wear		I	I	I	I	
*	Brake disk wear		I	I	I	I	
*	Brake hoses: No leaks or cracks		I	I	I	I	
	Brake levers		L	L	L	L	

\*: Heavy duty servicing

I: Inspect, clean, adjust, replace if necessary.  
R: Change.

C: Clean, replace if necessary.  
L: Lubricate, oil

GB

## SERVICE SCHEDULE DJANGO 125 CC

GB

	Operations to be carried out	500km 300mi or 1 months	5000km 3100mi	10000km 6200mi	15000km 9300mi	20000km 12400mi	ANNUAL MAINTENANCE
	<b>Electrical equipment</b>						
*	Lighting and signalling	I	I	I	I	I	I
	Headlight height adjustment	I	I	I	I	I	
*	Brake light switches	I	I	I	I	I	I
*	Battery: Charge level and no leakage	I	I	I	I	I	I
	<b>Miscellaneous</b>						
*	Processors: Reading of fault codes and update	I	I	I	I	I	
*	Overall operation: Road test	I	I	I	I	I	

\*:Heavy duty servicing

I: Inspect, clean, adjust, replace if necessary.  
R: Change.

C: Clean, replace if necessary.  
L: Lubricate, oil










	Servicing time in tenths of an hour 0.5 h = 30 mn)						
	Reception and Treatment	0.1	0.1	0.1	0.1	0.1	0.1
	Django 125 cc	1.2	1.8	2.8	1.8	3.6	0.8

Maintenance times are indicative. They do not take into account the replacement of wear parts.







<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>	<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>	<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>
<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>	<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>	<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>
<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>	<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>	<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>

FR

GB

DE

IT

ES

NL







GR










SE

PT










FI

DK

<div><div>_____ km</div><div>_____ <i>mi</i></div><div> _____ / _____ - / _____</div></div>	<div><div>_____ km</div><div>_____ <i>mi</i></div><div> _____ / _____ - / _____</div></div>	<div><div>_____ km</div><div>_____ <i>mi</i></div><div> _____ / _____ - / _____</div></div>
<div><div>_____ km</div><div>_____ <i>mi</i></div><div> _____ / _____ - / _____</div></div>	<div><div>_____ km</div><div>_____ <i>mi</i></div><div> _____ / _____ - / _____</div></div>	<div><div>_____ km</div><div>_____ <i>mi</i></div><div> _____ / _____ - / _____</div></div>
<div><div>_____ km</div><div>_____ <i>mi</i></div><div> _____ / _____ - / _____</div></div>	<div><div>_____ km</div><div>_____ <i>mi</i></div><div> _____ / _____ - / _____</div></div>	<div><div>_____ km</div><div>_____ <i>mi</i></div><div> _____ / _____ - / _____</div></div>

<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	

- FR
- GB
- DE
- IT
- ES
- NL
- GR
- SE
- PT
- FI
- DK

<div><div>_____ km</div><div>_____ mi</div></div>	
<div><div>_____ km</div><div>_____ mi</div></div>	
<div><div>_____ km</div><div>_____ mi</div></div>	
<div><div>_____ km</div><div>_____ mi</div></div>	
<div><div>_____ km</div><div>_____ mi</div></div>	
<div><div>_____ km</div><div>_____ mi</div></div>	
<div><div>_____ km</div><div>_____ mi</div></div>	
<div><div>_____ km</div><div>_____ mi</div></div>	
<div><div>_____ km</div><div>_____ mi</div></div>	



Peugeot Motocycles recommends



**ISO 9001 (Édition 2008) /  
N°SQ/1956**

**Peugeot Motocycles SA  
Rue du 17 Novembre  
F-25350 Mandeure**

Tél. +33(0)3 81 36 80 00

Fax +33(0)3 81 36 80 80

RCS Belfort B 875 550 667

**[www.peugeot-motocycles.fr](http://www.peugeot-motocycles.fr)  
[www.peugeot-motocycles.com](http://www.peugeot-motocycles.com)**

**0 800 007 216**

**Service & appel  
gratuits**

Dans un souci constant d'amélioration Peugeot Motocycles se réserve le droit de supprimer, modifier ou ajouter toutes références citées.  
DQ/APV du 03/2021 (photos non contractuelles).





# PEUGEOT MOTOCYCLES



Guide d'utilisation en ligne  
Online user's guide

i-Connect® : application Peugeot Motocycles disponible sur  
i-Connect® : Peugeot Motocycles app available on

