

**PEUGEOT**  
MOTORCYCLES

## **PEUGEOT METROPOLIS**

Livret de bienvenue  
& d'entretien

Welcome  
& maintenance booklet





**Bienvenue**

**FR**

**Welcome**

**GB**

**Herzlich willkommen**

**DE**

**Benvenuto**

**IT**

**Bienvenidos**

**ES**

**Welkom**

**NL**

**Καλώς ήρθατε**

**GR**

**Välkommen**

**SE**

**Bem-vindo**

**PT**

**Tervetuloa**

**FI**

**Velkommen**

**DK**



**MEMORANDUM**

**CONTENTS**

<b>Information .....</b>	<b>2</b>
<b>Your vehicle is guaranteed for 24 months .....</b>	<b>3</b>
<b>Important.....</b>	<b>6</b>
- Products to use	
- Maintenance advice	
- Cleaning the vehicle	
- Environment / Recyclable	
- Extended periods of immobilisation and storage	
<b>Starting and driving .....</b>	<b>8</b>
- The smart key	
- Emergency key	
- Rotating knob	
- Starting the engine	
- Engine cut-off	
- Driving	
- Braking system ABS	
- Use of the brakes	
- Stopping the vehicle and parking	
<b>Controls .....</b>	<b>10</b>
<b>Instruments.....</b>	<b>11</b>
- Warning lights	
<b>Equipments.....</b>	<b>12</b>
- Pair a Bluetooth ® telephone *	
- Resetting the tripmeter	
- Storage compartments	
- Adjustable windshield	
- Storage compartment / Accessory socket (USB)	
<b>Advice .....</b>	<b>13</b>
- Fuel supply	
- Checking the engine oil level	
- No SMART KEY recognition	
<b>Service schedule.....</b>	<b>15</b>

Name: - - - - -

First name: - - - - -

Address: - - - - -

Post code: - - - - -

Town:- - - - -

Telephone number: - - - - -

Model: - - - - -

Colour: - - - - -

Engine no.: - - - - -

**Affix the label with the repair code here smart key.**



**PRE-DELIVERY INSPECTION**

VIN: VGA

The dealer must carry out the pre-delivery inspection and supply the preparation sheet for the delivered vehicle.

**Inspection on delivery**

Customer signature

I have inspected the appearance of the vehicle and signed the pre-delivery preparation sheet for my vehicle, I did not notice any anomaly. I have been informed that it is important to read the user manual and maintenance book.

Date:

Customer signature:

Dealer signature

I confirm that the vehicle identified above has undergone preparation and a pre-delivery inspection as specified by PEUGEOT MOTOCYCLES. I have supplied the customer with the user manual and maintenance book. I have explained how to operate the machine's controls and emphasised that it is important to consult the user manual and PEUGEOT MOTOCYCLES warranty conditions.

Date:

Dealer signature:

## INFORMATION

You have just bought a Peugeot vehicle.

We would like to thank you for purchasing one of our products.

Your vehicle is built to last but this does not mean that it does not require a minimum amount of maintenance.

Your authorised dealer is familiar with all the vehicle's characteristics and has genuine spare parts and specific tools. He can advise you and service your vehicle in the best conditions according to the established service schedule to ensure that you can enjoy driving it in complete safety.

This manual must be considered as an integral part of the vehicle and must remain with it even if the vehicle is sold on.

It also describes a selection of your vehicle's most common functions.

However, we advise you to read the entire user manual, which is available in digital format at the following address:

<https://www.peugeot-motocycles.fr/documentation>

Scan this QR code for direct access:



In particular, you will find the safety instructions, warnings, important notes and comments in it.

The following symbols mean:



**You are advised to read the full version of the user manual.**



**Operation that can be dangerous for people.**



**Operation that can be hazardous to the vehicle.**



**Gives key information concerning operation of the vehicle.**



**An asterisk indicates equipment depending on the version.**



**The product pollutes.**

**Do not dispose of it in the environment.**

## YOUR VEHICLE IS GUARANTEED FOR 24 MONTHS

Parts and labour, unlimited mileage

The manufacturer of your vehicle, PEUGEOT MOTOCYCLES, which has its head office at rue du 17 novembre - 25350 Mandeure (France), hereinafter PEUGEOT MOTOCYCLES, offers you a commercial warranty on your new combustion engine or electric vehicle against any material or construction defects.

### 1. DURATION OF THE WARRANTY

PEUGEOT MOTOCYCLES guarantees your vehicle for a period of 24 months as from when it is registered for the first time with unlimited mileage unless you are informed otherwise, except for:

- The 2.0 E-Powered by GenZe & e-Ludix electric vehicle traction battery for which the current warranty is 24 months or 20 000 km, whichever is reached first, subject to the maintenance charges having been done regularly in accordance with the instructions in the PEUGEOT MOTOCYCLES maintenance manual;
- The 2.0 E-Powered by GenZe & e-Ludix electric vehicle traction battery for which the stated nominal capacity has declined by less than or equal to 25%, measured by a PEUGEOT MOTOCYCLES network technician during the warranty period. Due to the inherent chemistry of the battery, a decline in battery capacity (and therefore the vehicle's autonomy) may be observed over time, as the vehicle is used and according to the storage conditions;
- The combustion engine vehicle battery for which this warranty is six months subject to a minimum mileage of 200 km per month.

### 2. CONDITIONS OF APPLICATION OF THE COMMERCIAL WARRANTY

In order for the cost of work to be carried out on your vehicle to be covered by this commercial warranty, the work must be carried out by a workshop from the PEUGEOT MOTOCYCLES approved network only.

If your vehicle is sold on, its successive owners shall benefit from the warranty until its date of expiry on condition that the application conditions of the warranty have been satisfied by each of them. For this purpose you undertake to transmit the warranty application conditions to the buyer of your vehicle.

### 3. FIELD OF APPLICATION OF THE COMMERCIAL WARRANTY

Apart from the restrictions stated below, this commercial warranty covers the repair or replacement of any elements found to be faulty by PEUGEOT MOTOCYCLES or its representative and any ensuing labour costs.

#### It should be noted that:

- The repair or replacement of parts under this commercial warranty does not extend the duration of the latter. The warranty covering replacement parts fitted to your vehicle expires on the same date as your vehicle warranty; However, if your vehicle is immobilised for a period greater than or equal to 7 consecutive days under this commercial warranty due to PEUGEOT MOTOCYCLES, said warranty will be extended by the same period;
- The faulty parts replaced under the warranty will be kept and become the property of PEUGEOT MOTOCYCLES.

#### The warranty applies on condition that:

- The first "running in" service at 1 month or 500 km has been carried out in accordance with the PEUGEOT MOTOCYCLES service book and the vehicle has been regularly maintained in line with the instructions in the PEUGEOT MOTOCYCLES service schedule and you can provide proof of this (service monitoring sheet, invoices, etc.);
- The damage is not due to the replacement of original parts by parts that have not been approved by PEUGEOT MOTOCYCLES (such as, but not limited to, exhaust pipe, cylinder, piston, spark plug, inlet silencer on combustion vehicles, fuses, traction battery modules and the traction battery charger for electric vehicles, etc.), or to repairs, transformations or modifications which may have been carried out on the vehicle by companies not approved by PEUGEOT MOTOCYCLES;
- The damage is not due to additional parts or equipment that have not been approved by PEUGEOT MOTOCYCLES (such as, but not limited to, additional charger for the electric vehicle, alarms, radio, headlights, luggage carriers on the combustion or electric vehicle, etc.);
- The damage is not due to negligence, incorrect use, failure to follow the advice given in the PEUGEOT MOTOCYCLES service schedule or the user manual, overloading, even temporary, or the driver's lack of experience;

GB

## YOUR VEHICLE IS GUARANTEED FOR 24 MONTHS

Parts and labour, unlimited mileage

GB

### The warranty does not cover:

- Maintenance operations (such as, but not limited to: oil change, lubrication, adjustment, cleaning, tensioning, etc.) and servicing listed in the PEUGEOT MOTOCYCLES service schedule and required for your vehicle to operate properly;
- Repairs resulting from the use of fuels, lubricants or grease other than those recommended by PEUGEOT MOTOCYCLES;
- Repairs due to abnormal usage, an accident, theft, fire or natural causes (such as, but not limited to: hail, flooding, etc.);
- Appearance defects on the surface of the 2.0 E-Powered by GenZe electric vehicle chassis, these being inherent to the aluminium moulding procedure used;
- Corrosion or surface oxidation on the chassis, the screws, and, more generally, on all other metal parts, whether treated or not on combustion or electric vehicles (however, pitting corrosion is covered for a period of 24 months);
- The replacement of parts subject to normal wear linked to use of the vehicle, its mileage, its geographical and climatic environment and their non-reusable fastening parts (such as, but not limited to: self-locking nuts, etc.), if this replacement is not due to a manufacturing defect. This includes but is not limited to the following parts;

- Drive pulley and driven pulley and belt on combustion or electric vehicles, clutch, rollers, mobile flange, guides, chain, pinion, rear cog of the combustion vehicle;
- Bulb, fuse, tyres, brake linings and pads, brake disks, cables and cable controls of combustion or electric vehicles, spark plug and spark suppressor on combustion vehicles;
- Shock absorbers (hydraulic, gas, single spring, elastomer) on combustion or electric vehicles, air filter, entire intake silencer, fuel filter, oil filter, cylinder, piston and piston segments on a 2-stroke engine;
- Exhaust on combustion engine (except unwelded internal elements);
- The liquids and products (grease, hydraulic fluid, brake fluid, gearbox oil for combustion or electric vehicles, engine oil and coolant for combustion vehicles, etc.);
- Noises and vibrations which have no influence on the reliability, safety and road behaviour of the vehicle;
- Any other expenses not specifically included in this warranty or the legal compliance warranty or the legal warranty against hidden defects, such as, but not limited to: costs due to the vehicle being immobilised, loss of use or business, etc.

### 4. GEOGRAPHICAL SCOPE OF APPLICATION

The warranty is applicable in the countries or territories where the vehicle is marketed by the approved PEUGEOT MOTOCYCLES network (in particular, France, Germany, Italy, Spain) a list of which can be consulted on the manufacturer's website:

<http://www.peugeot-motocycles.com>

The vehicle is intended exclusively for sale and use in the above-mentioned countries and territories excluding all other countries or territories, where the applicable standards may be different to those in the above-mentioned countries and territories, such as, but not limited to, the United States of America, etc.

Use of the vehicle in these excluded countries or territories is under the user's entire responsibility and excludes the application of this warranty as well as the vehicle manufacturer's responsibility for any reason whatsoever.


In some countries, especially in European Union Member States, the consumer has rights under the applicable national legislation. These rights are not affected by the warranty as defined above.



## IMPORTANT

### PRODUCTS TO USE

#### Fuel

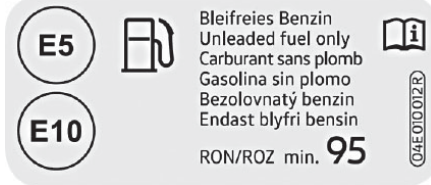

#### Engine oil

SAE 5W40 Synthetic API SL/SJ

#### Relay box oil

SAE 80W90 API GL4

#### Grease

High-temperature grease  
Multi-use grease

#### Brake fluid

Brake fluid DOT 5.1

#### Coolant

Coolant: Peugeot type C

### MAINTENANCE ADVICE

Ensure that the servicing schedule for your vehicle is strictly followed to maintain your contractual warranty rights.

A table of inspections for the maintenance schedule is inserted into the maintenance booklet. The registered dealer must add his stamp, the date of servicing and the number of kilometres the vehicle has covered.

In order to maintain maximum safety and reliability of your vehicle, you are advised to have maintenance and repairs carried out by a registered dealer who has the necessary technical training, specific tools and spare parts.

After an accident, it is recommended to have the vehicle inspected and repaired by a registered dealer.

### CLEANING THE VEHICLE



The bodywork is made of plastic parts that can be painted or are shiny. Do not use solvents or cleaning products that are too corrosive.



Do not use high pressure cleaners which may cause water to infiltrate the following parts: seals, bearings and hinges, electrical components such as connectors, contactors and lighting.

Wash the bodywork with soapy water and rinse with generous amounts of clear water.

The vehicle can be dried with a chamois leather.

After washing the vehicle, brake several times at low speed to dry out the brakes.



The vehicle should be washed in a place equipped for wastewater collection.

Certain silicon-based products can alter the quality of the paintwork.

In case of need or doubt, a registered dealer can advise you on using cleaning products or restoring scratched bodywork.

# MOTUL

## ENVIRONMENT / RECYCLABLE

Worn parts replaced during routine maintenance (mechanical parts, battery, etc.) must be disposed of with specialised bodies.

At the end of its life, the vehicle must be taken to an authorised centre for recycling.

In all cases, comply with the local laws.



**Batteries contain harmful substances. They must be disposed of according to the legal requirements and must under no circumstances be thrown away in the household waste.**

## EXTENDED PERIODS OF IMMOBILISATION AND STORAGE

If the vehicle must remain immobilized for one or more months, it is advisable to perform the following operations:

### Battery



**If the vehicle is not used for an extended period, the battery will slowly discharge naturally or due to its electronics or certain accessories and must thus be regularly charged.**

- Charge the battery to 100% beforehand (The battery's maximum charging current is equal to 1 tenth of its capacity).
- Use a maintenance charger or charge monthly.
- Before restarting, the battery must be charged to 100%.



**If these recommendations are not followed, the battery may go into deep discharge. In this case the manufacturer's warranty will be void.**

### Machine

- Empty the fuel tank to avoid fuel build-ups.
- Spray a lubricant onto the metal parts of the vehicle to avoid oxidation.
- Store the vehicle in a dry place.

### Re-starting your vehicle

You are advised to have the vehicle checked over by a registered dealer if it has been immobilized for an extended period.

GB

## QUICK-START GUIDE


### STARTING AND DRIVING

#### The smart key



The smart key key is an electronic key which is recognised by the system within a radius of 1.5 meters and:

- Switches on the engine.
- Unlocks the storage compartments.

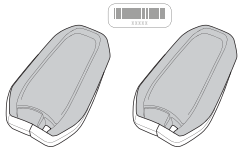


**In certain conditions, the smart key key may not function if the vehicle is located in an area subjected to high electromagnetic radiation.**

#### Emergency key




An emergency key is integrated into the smart key key.

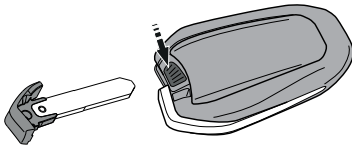

The emergency key is only used in exceptional cases to unlock the rear storage compartment if the vehicle battery is flat.

#### Rotating knob

The smartkey is recognised by the system within a radius of approximately 1.5 metres.

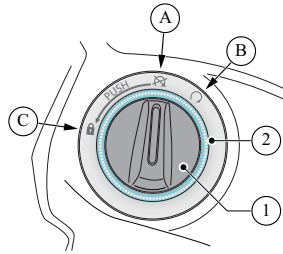

1. Rotating knob.
2. Lighted surround (Blue).

A. stop position.  
B. On/start position.  
C. Steering unlocked.

#### Starting the engine

For greater safety, place the vehicle on its central stand before starting the engine.

- The driver must carry the smart key key on his/her person.
- Press and hold the rotating knob for one second to wake up the system; the lighted surround lights up to indicate the presence of the smart key.
- Turn the rotating knob to "ON". The lighted surround lights up steadily.
- Wait for the end of the instrument panel self-test.
- Ensure that the throttle is in the OFF position.
- Press one of the brake levers while pressing the starter button (⚡).
- Release the starter button as soon as the engine starts.

#### Engine cut-off


- Turn the rotating knob to "OFF".



#### Driving

The vehicle is on its stand with the engine running.

- Hold the handlebar with the left hand and the grab handle with the right hand and push the vehicle forwards to fold the central stand.
- Sit on the vehicle.
- Release the electric parking brake if necessary.
- To start the vehicle, gradually twist the throttle with your right hand.

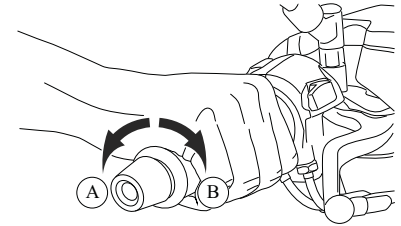

To accelerate, turn the throttle towards (A). To slow down, turn the throttle towards (B).

#### Braking system ABS

This vehicle is fitted with an ABS braking system coupled with an integral braking system.

- The right lever acts on the front wheels.
- The left lever acts on the rear wheel.

#### Use of the brakes

- Close the throttle.
- Activate the brake system by gradually increasing the pressure.

## Stopping the vehicle and parking



Stop the vehicle and switch of the engine by turning the rotating knob to "OFF".


The vehicle should be preferably parked on flat ground.

- On the central stand or on its wheels with the anti-tilting system activated.




**When locking the steering, the knob should return to the released position (right-hand illustration). If it does not, there is a potential risk of flattening the battery.**

**Make sure you turn the knob to the left as far as it will go to avoid it remaining pressed down and ensure it returns to the released position**

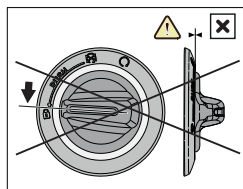

Steering locked and knob pressed down

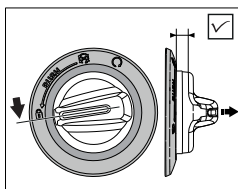


Steering locked with the knob in released position



**Always engage the electric parking brake and lock the steering each time the vehicle is parked.**

If the vehicle is parked on a steep slope, you are advised to engage the electric parking brake, lock the steering and lock the wheels against the edge of the pavement as shown in the diagram below.

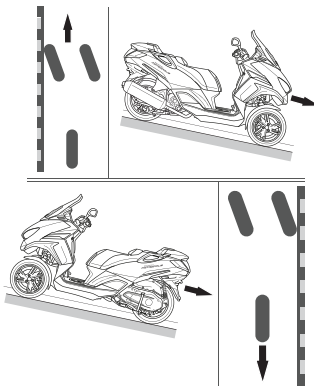


**The parking brake and the anti-tilting might not hold the vehicle upright in all situations: Load on the vehicle, steep slope, prolonged immobilisation...**

**Preferably park the vehicle on the central stand.**

## CONTROLS

### Right controls

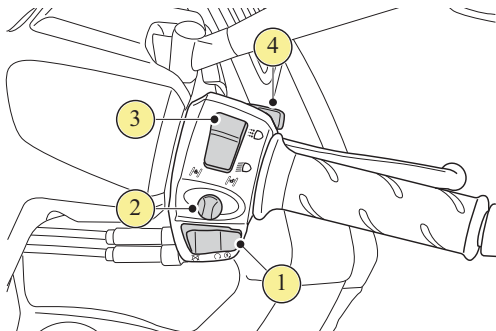

#### 1. Emergency stop button/Starter switch.

#### 2. Anti-tilting system ECU.

Push the switch to this position to lock the front axle. The warning light comes on with the emission of a long beep.

Push the switch to this position to unlock the front axle. The warning light goes off with the emission of 2 beeps.


#### 3. Lighting switch / Daytime lights (DRL).

#### 4. "SELECT" selection button.

This control enables:

- access to the connectivity menu \* (Press and hold for 2 seconds).
- navigation within the menus (exiting a menu).
- confirmation of a choice (Press and hold for 2 seconds).

### Left controls

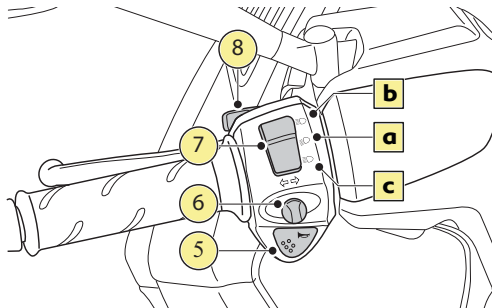

#### 5. Horn switch.

#### 6. Indicators switch.

#### 7. Dipped light switch / High beam / Flashing the lights.

#### 8. "EXIT" selection button


This control enables:

- access to the instrument panel personalisation menu (Press and hold for 2 seconds).
- navigation within the menus (exiting a menu).
- exiting a menu (Press and hold for 2 seconds).


### Central controls



#### Standard version

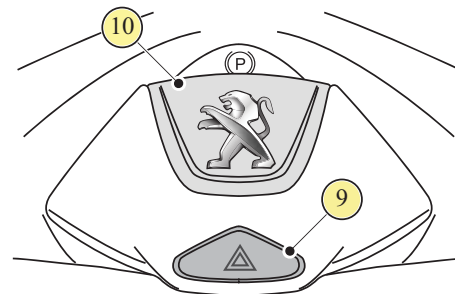


#### Version GT

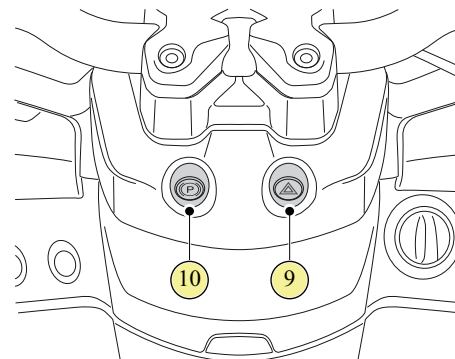

#### 9. Hazard warning light switch.

#### 10. Electric parking brake button.

## INSTRUMENTS

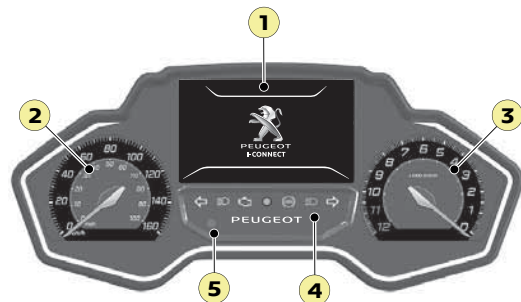


1. Digital display (I-CONNECT).
2. Analogue speedometer.
3. Revolution counter.
4. Area displaying the warning lights / Operating lights.
5. Brightness sensor.



Refer to the online user manual for further information.

## Digital display

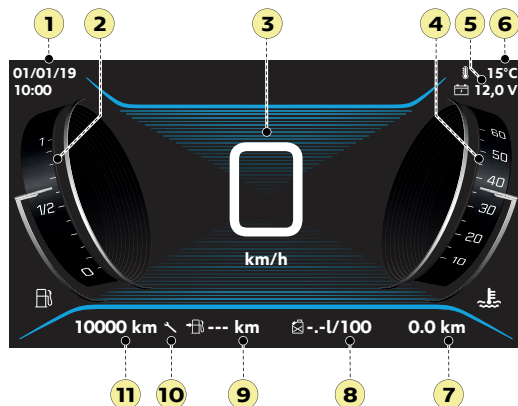

1. Date / Clock.
2. Fuel gauge.
3. Digital speedometer (km/h or mph).
4. Engine temperature gauge.
5. Battery voltage.
6. Outside temperature gauge (°C or °F).
7. Tripmeter.
8. Average consumption indicator.
9. Autonomy indicator.
10. Maintenance indicator.
11. Milometer.



Refer to the online user manual for further information.

## WARNING LIGHTS

The warning lights inform the driver of the start-up of a system or appearance of a malfunction.



Refer to the online user manual for further information.

GB



Emissions control system failure warning light / Engine self-diagnostic



fixed / Flashing.

The anti-pollution system is faulty.



You are advised to have the vehicle checked by an authorised dealer.

## EQUIPMENTS



The user manual describes other equipment.

GB

Pair a Bluetooth® telephone \*



Enable mobile Internet data on your smartphone (or wifi).

1. Download the PEUGEOT MOTOCYCLES app from the store corresponding to your smartphone.
2. Create an account.
3. From the "connectivity" menu, enable the vehicle's Bluetooth function.
4. Activate the Bluetooth function on your smartphone.
5. Open the PEUGEOT MOTOCYCLES application on your phone.
6. From the Settings tab, press "Scooters" and then "ADD A NEW SCOOTER".
7. Using your telephone key pad, enter the same PIN code displayed on the screen and confirm.



If connection fails (impossible to enter the pairing code, etc.):

- Shut down the Peugeot Motocycles app completely (check it is not running in the background).
- Check that there are no other connected smartphones nearby: disable its Bluetooth connection.
- Activate Bluetooth and restart the Peugeot Motocycles app on the smartphone to be paired.




Refer to the online user manual for further information.

## Resetting the tripmeter



- Reset the tripmeter by simultaneously pressing the "SELECT" and "EXIT" controls for 3 seconds (Or via the "Personalisation - Configuration" menu).

## Storage compartments

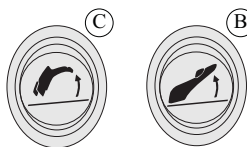

With the smart key present, press on a control button to unlock the corresponding storage compartment.


- B. Unlocking control for front storage compartment.  
C. Unlocking control for rear storage compartment.



**You are advised not to leave any objects in the storage compartments, whatever the value (helmet, document-holder, etc.), the manufacturer may not be held liable in the event of theft or intrusion.**


## Adjustable windshield

This vehicle is fitted with a height-adjustable windshield.

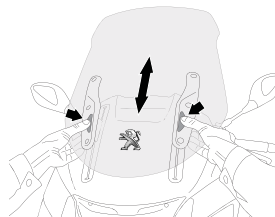

- Press simultaneously on the buttons and move the windshield up or down according to the desired position.
- Release the buttons and gently move the windshield to lock it into the notches.

## Storage compartment / Accessory socket (USB)

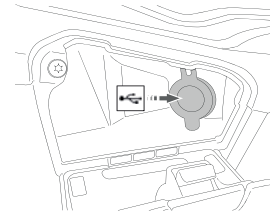

A USB socket fitted in the storage compartment, powered when the ignition is switched on, allows you to connect a mobile device (MP3 player, telephone, GPS, etc).

## Rear storage compartment

### Opening the storage compartment flap

- With the smart key present, press the control button to unlock the rear storage compartment.
- Lift the storage compartment flap up to the upper stop. It will remain in position\*.

### Closing the storage compartment flap


- Lower the storage compartment flap half way and allow it to lower under its own weight to lock it.



**Risk of injury: Do not put your hands between the flap and the storage compartment while it is closing.**

## ADVICE

### Fuel supply

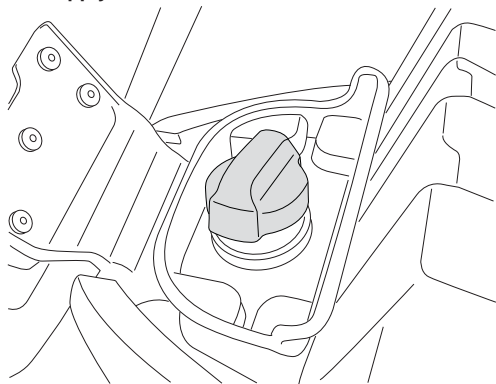


- Open the front storage compartment.
- Remove the tank cap.
- Fill the tank, ensuring the nozzle is correctly inserted into the filling orifice.

### Checking the engine oil level




**Check the oil level every 1000km / 600Mi or before a long journey.**

- To correctly measure the oil level, place the vehicle on the centre stand on flat ground.
- Start the engine, let it run for a few minutes and then stop it.
- After switching off the engine, wait for 5 minutes to allow the engine oil time to return to the oil sump.
- Remove the cap/oil gauge (1).

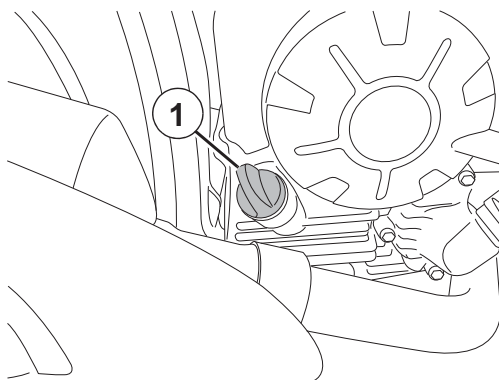

- Wipe the filler cap/gauge using a clean cloth and reinsert it into the filler hole **without screwing it up**.

- Remove the filler cap/gauge and check the oil level.
- The oil level shall be between the minimum (A) and maximum (B) level marks without exceeding the latter.

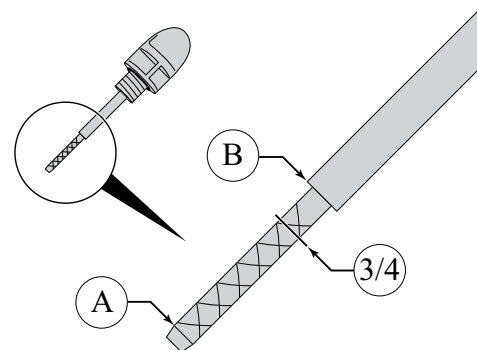

- If the oil level is close to the minimum mark or lower, you are advised to immediately top up the level to 3/4 in small amounts using the oil recommended by the manufacturer.



**Too much oil will noticeably restrict the vehicle's performance.**

GB


## No SMART KEY recognition



You are advised to read the full version of the user manual.

If the smart key is not recognised, the vehicle can be started using the following procedure.

GB

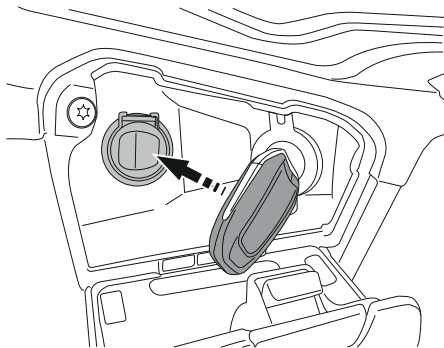

- Open the glove box.
- Hold the smart key against the emergency antenna.
- Press and hold the rotating knob for 2 seconds.
- Turn the rotating knob to ON.
- The vehicle should start.

### Possible causes of non-recognition:

- Low battery or incorrectly positioned.
- Radio disturbance.
- Damaged smart key.

## SERVICE SCHEDULE

The servicing must be carried out by a registered representative PEUGEOT MOTOCYCLES.

Servicing to be carried out at every maintenance check	
Steering column play.	V
Wheel bearing play.	C
Throttle cable play.	V
Operation of electrical equipment.	V
Condition of front and rear brake hydraulic controls.	V
Condition of parking brake control.	V
Checking the adjustment and wear of the pads on the parking brake caliper.	V
Anti-tilting control status.	V
Brake fluid level.	V
Brake pad wear / Brake disk wear.	C
Condition of petrol pipes / Check that there are no leaks.	C
Tyre condition, pressure and wear.	C
Front axle tilt end-stop.	C
Battery charge.	V
Coolant level.	V
Engine oil level.	V Every 1000 km/600mi
Operation of emergency lock.	V
Headlight height adjustment.	V
Tightness of nuts and bolts.	V
Overall operation. Road test.	V
Reading the ECU fault codes/Update.	V

**V: Check, clean, adjust. R: Change. G: Check, clean, lubricate.  
C: Inspect and change if necessary. N: Clean.**

GB

## SERVICE SCHEDULE

The servicing must be carried out by a registered representative PEUGEOT MOTOCYCLES.

Annual maintenance is only carried out when the vehicle has not been serviced during the course of the year.










GB

Service operations	Maintenance on 1000 km 600 mi	Maintenance every 5000 km <sup>a</sup> 3100 mi <sup>a</sup>	Maintenance every 10000 km 6200 mi	Maintenance every 20000 km 12400 mi	ANNUAL MAINTENANCE
Spark plug.			R	R	
Valve clearances.	V Every 40000 km				
Engine oil.	R	R	R	R	R
Oil filter.	R		R	R	
Transmission air filter.	R Every 10000 km (5000 km if harsh use servicing <sup>a</sup> )				
Drive pulley rollers and guides/Flange wear.			C	C	
Transmission belt.			R	R	
Driven pulley caged needle bearing.			G	G	
Air filter.	R Every 20000 km (10000 km if harsh use servicing <sup>a</sup> )				
Intake silencer drain.		N	N	N	N
Condition of the front suspension/Ball joint/Bearings.		V	V	V	
Condition of the rear suspension.		V	V	V	
Petrol filter.			R	R	
Joints (Central stand, Brake levers...).	G	G	G	G	G
smart key battery.	R Once every 2 years				
Petrol pipe.	R Once every 5 years				
Brake fluid.	R Once every 2 years				
Coolant.	R Once every 5 years				
V: Check, clean, adjust. R: Change. G: Check, clean, lubricate. C: Inspect and change if necessary. N: Clean.					

Servicing time in tenths of an hour (0.5 h = 30 mn)					
Reception and Treatment.	0.1	0.1	0.1	0.1	0.1
Peugeot Metropolis maintenance time	0.8	0.6	2	3.6	0.6

a. Carry out this servicing if the vehicle is used in "severe" conditions:

Damp, dusty or very hot environment, and used mainly around town, at temperatures regularly below -5°C, short journeys or repeated door-to-door journeys with a cold motor...

<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>	<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>	<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>
<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>	<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>	<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>
<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>	<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>	<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>

FR

GB

DE

IT

ES

NL






GR










SE

PT










FI

DK

<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>	<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>	<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>
<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>	<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>	<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>
<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>	<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>	<div>_____ km</div> <div>_____ <i>mi</i></div> <div> _____ / _____ / _____</div>

<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	

- FR
- GB
- DE
- IT
- ES
- NL
- GR
- SE
- PT
- FI
- DK

<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	
<div>_____ km</div> <div>_____ mi</div>	

Peugeot Motocycles recommends



**ISO 9001 (Édition 2008) /  
N°SQ/1956**

**Peugeot Motocycles SA  
Rue du 17 Novembre  
F-25350 Mandeure**

Tél. +33(0)3 81 36 80 00

Fax +33(0)3 81 36 80 80

RCS Belfort B 875 550 667

**[www.peugeot-motocycles.fr](http://www.peugeot-motocycles.fr)  
[www.peugeot-motocycles.com](http://www.peugeot-motocycles.com)**

**0 800 007 216**

**Service & appel  
gratuits**

Dans un souci constant d'amélioration Peugeot Motocycles se réserve le droit de supprimer, modifier ou ajouter toutes références citées.  
DQ/APV du 03/2021 (photos non contractuelles).







# PEUGEOT

## MOTOCYCLES



Guide d'utilisation en ligne  
Online user's guide

i-Connect® : application Peugeot Motocycles disponible sur  
i-Connect® : Peugeot Motocycles app available on

